



ALUMAX

BATH ENCLOSURES

738/790 TOWEL BAR


INSTALLATION INSTRUCTIONS

a product of Alcoa

PO Box 40, Magnolia, AR 71754-0040 (870) 234-4280

PARTS LIST

- A. 1 Towel Bar Cap
- B. 1 #7 x 1/2" Flat Head Screw
- C. 1 Towel Bar Base
- D. 1 Towel Bar Assembly
- E. 1 Cap Nut

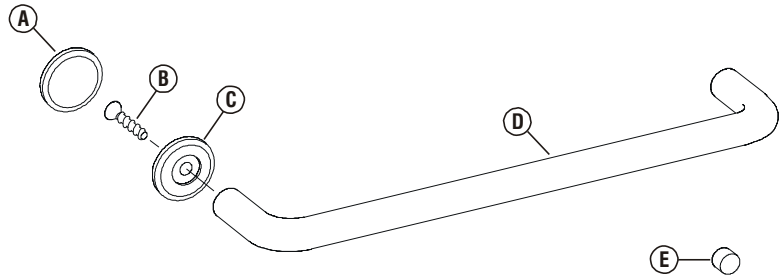

INSTRUCTIONS

Remove the door panel and lay it flat on a worktable with the handles accessible. Secure the towel bar base to the towel bar with the #7 x 1/2" flat head screw. Use alcohol to thoroughly clean the towel bar pad and cap and the glass on both sides in the approximate location where the towel bar will be attached to the glass. Loosen the handle screws until the exterior handle can be removed. Attach the cap nut to the exterior of the panel with the lower handle screws. Loosely thread the upper screw into the towel bar. Using a carpenter's framing square or tape measure, square up the towel bar on the door panel. Use a pencil to mark the towel bar pad's location on the glass (mark must be visible through the glass).

Remove the towel bar assembly and turn the door panel over so the interior side is up. Apply a structural adhesive such as epoxy* (*not supplied*) on the interior face of the glass in the location marked. Press the towel bar cap into place and secure it with a strip of masking tape.

Turn the door panel back over so the exterior face is up, being careful not to move the towel bar cap. Apply adhesive onto the glass in the marked position. Reattach the towel bar and handle screw and carefully rotate the towel bar into position and press it firmly into the adhesive. Use several strips of masking tape to secure the towel bar. After the adhesive has cured, reinstall the door panel.

* An optional adhesive kit is available.

Adhesive Kit Part Number: EPH-N00-04375.

